


Over Windscreen Tonneau

Your Poly Pattern should look something like this. It is only necessary to have 5 darts.

Please don't put more than this.

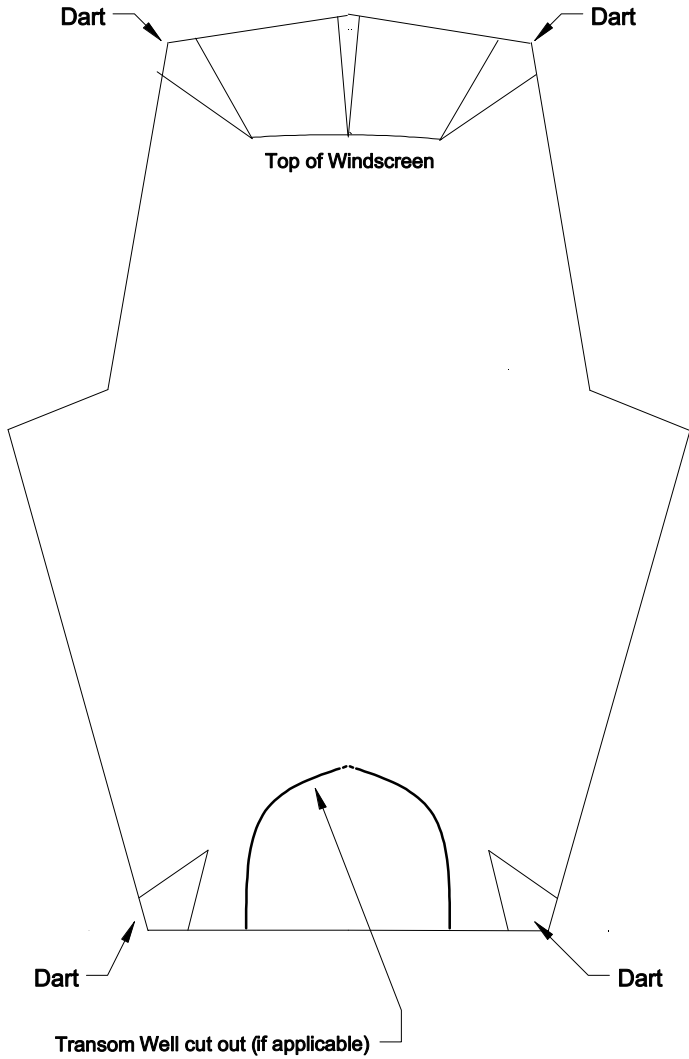

Tonneau to Windscreen Plan

Your Poly Pattern should look something like this. It is only necessary to have 4 darts.

Please don't put more than this.

